

D

Gebrauchsanweisung

GB

Operating instructions

F

Mode d'emploi



DIANA

Mod. 24 – 26 – 28 –
34 – 36 – 38 – 45 –
350 Magnum



Luftgewehre
Air rifles
Carabines
à air comprimé



Instruction manual

Mod. 24 - 26 - 28 - 34 - 36 - 38 - 45 - 350 Magnum

Operating Instructions

„Congratulations on your purchase of your new air rifle made by Mayer & Grammelspacher Dianawerk GmbH & Co. KG, Rastatt/Germany.

We hope that this air rifle with hinged barrel of the new generation will bring you lots of fun and always top scores.

Important: Never let your gun point at people even if it is uncocked and unloaded always shoot safely.“

Cocking Models 24 - 26 - 28 - 34 - 36 - 38 - 45 - 350 Magnum

- With one hand grasp stock firmly behind trigger guard.
- Holding rifle securely tap barrel near front sight, thus breaking locked position.
- Grasp barrel behind front sight and push down until you hear an audible click of the trigger mechanism being engaged.
- Insert pellet into breech end of open barrel. Make sure calibre of pellet matches calibre of rifle.
- Return barrel to original locked position. The safety engages automatically.
- Push safety slide situated at the end of the compression tube forward. The rifle is now ready to fire.

Don't block safety lever during cocking action!

Trigger device

The models 26-28-34-36-38-45-350 Magnum are equipped with an adjustable two stage trigger as standard. (**Mod. 24 not adjustable.**) Both the trigger travel and the pull-off point are already factory adjusted. The screw 1 should not be touched. It is used only for factory adjustment.

The length of first stage travel can be adjusted with screw 2:

- turn clockwise = shorter first stage
- turn anti-clockwise = longer first stage

Turning the adjustment screw 2 too far to the left will cause the second stage to be eliminated, resulting in the shooter not being able to feel the firing point.

Sight adjustment

Rearsight

The settings for elevation marked by the numbers 0-9 on the elevation adjustment screw.

- If rifle shoots high: turn screw clockwise.
- If rifle shoots low: turn screw counterclockwise.

Note: The numbers are just for memory, they do not apply for distances.

Windage settings are marked on the sliding scale on the rear-sight rail and are controlled by turning the large knurled screw on the side.

- If the rifle shoots to the right: turn screw clockwise.
- If the rifle shoots to the left: turn screw counterclockwise.

The micrometer rearsight is equipped with a plate having four differently shaped notches. Pull and turn the plate according to the notch of your choice.

Care and Cleaning


Diana air rifles 24-26-28-34-36-38-45-350 Magnum

At intervals the barrel should be cleaned by means of a felt wad or cleaning rod with wool mop. Wire brushes should not be used. Insert rod from breech end, do not remove barrel seal.

The blueing prevents the outer parts from easy rusting. Maintain protection by occasionally wiping these parts with slightly oiled cloth.

It is detrimental to fire the weapon without a pellet in the barrel, as the free impact strains the mechanism. Do not leave the rifle in cocked position for long periods whether loaded or not – as this weakens the mainspring.

For rifled barrels lead pellets are recommended only.

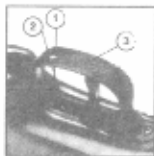

Mod.	Gesamt-Länge mm total length mm longueur totale mm	Lauflänge mm barrel length mm longueur du canon mm	Gewicht kg weight kg poids kg	Kal./Cal. 4,5 mm V.	Kal./Cal. 5,5 mm V.
24	1060	440	2,80	175 m/s	130 m/s
26*	1090	440	3,00	235 m/s	175 m/s
28*	1090	440	3,00	235 m/s	175 m/s
34*	1150	495	3,35	280 m/s	210 m/s
36*	1150	495	3,65	280 m/s	210 m/s
38*	1150	495	3,65	280 m/s	210 m/s
45*	1150	495	3,50	280 m/s	210 m/s
350 Magnum	1225	495	3,85	360 m/s	260 m/s
* Modelle für die Bundesrepublik Deutschland in „F“-Ausführung				175 m/s	130 m/s

GARANTIEERKLÄRUNG

Für dieses Luftgewehr gewähren wir eine Garantie bis zu einem Jahr.

Ausgenommen sind Defekte, die durch unsachgemäße Behandlung, Gewaltanwendung oder normale Abnutzung entstehen.

WARRANTY

This air rifle is guaranteed up to one year.

Excluded are such damages as may occur through improper handling or as a result of normal wear and tear. Guarantee obligation becomes invalid if the rifle is dismantled.

GARANTIE

Pour cette carabine à air, nous donnons une garantie d'un an.

Les dommages résultant d'une intervention intempestive ou d'une usure normale sont exclus du champ d'application de la garantie. Nos obligations de garantie sont automatiquement caduques si la carabine à air comprimé a été démontée.

Mayer & Grammelspacher
Dianawerk GmbH & Co. KG
Postfach 14 52
D-76404 Rastatt/Germany

Art.-Nr. 454 00048
Printed in Germany
Imprimé en Allemagne

Deutsche Bundespatente
Auslandspatente
U.S.Pat. 4,649,893

**This owner's manual was
provided as a service to you
by:**



www.airgunsofarizona.com

airguns_az@yahoo.com

Phone: (480)461-1113

Fax: (480)461-3928