





# Pro-7 Progressive Press

## PARTS LISTING

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
01	190216	Frame	34	392011	Primer Stop Nut
02	190217	Toggle	35	392438	Set Screw
03	*392437	Socket Head Set Screw	36	392439	Primer Tube Pin
04	392408	Toggle Link	37	392442	Spring Washer (S.P.)
05	392417	Toggle Link Pin	38	392441	Spiral Pin (lower)
06	392424	Spring Washer	39	392415/A	Pawl Housing (left)
07	390081	Retaining Ring	40	392403	Pawl
08	392406	Yoke	41	392423	Pawl Spring
09	392416	Toggle Pin	42	392415/B	Pawl Housing (right)
10	392404	Carriage	43	050051	Index Wheel
11	392405	Subplate	44	392427	Spiral Pin
12	392429	Spring Plunger	45	392410	Base Plate (A.P.F.)
13	392425	Spiral Pin (upper)	46	392411	Primer Arm (A.P.F.)
14	392412	Drive Shaft	47	050045	Primer Tube Housing
15	392422	Thrust Washer	48	190005	Body (A.P.F.)
16	392426	Spiral Pin	49	392407	Primer Arm Spring
17	See chart (page 16)	Shell Plate	50	390063	Spring Screw (A.P.F.)
18	392440	Self-locking Nut	51	392430	Body Spring (A.P.F.)
19	392409	Case Retainer Spring	52	050046	Small Primer Tube
20	392418	Handle	53	050047	Large Primer Tube
21	480003	Knob	54	392419	Bolt (A.P.F.)
22	390027	Handle Lock Nut	55	392401	Small Primer Punch
23	392413	Powder Measure Adapter	56	392402	Larger Primer Punch
24	190218	Small Sleeve	57	390007	Primer Cup Spring
25	190219	Large Sleeve	58	390034	Small Primer Cup
26	040451	Sure-Lok Lock Ring	59	390035	Larger Primer Cup
27	†392431	Cap Screw, Automatic Primer Feed (A.P.F.)	60	392434	Stop Pin (A.P.F.)
28	392414	Cam (A.P.F.)	61	392433	Cap Screw (A.P.F.)
29	†392432	Cap Screw (Cam)	62	392421	Lock-Nut (A.P.F.)
30	290029	Spent Primer Tube	63	050052	Spent Primer Container
31	580199	ID Plate	64	392444	Set Screw
32	392428	Wrench, Shell Plate (S.P.)			
33	390190	Primer Stop Screw			

\* Uses 1/8 inch Allen Wrench

† Uses 5/32 inch Allen Wrench

### SOLD ONLY AS ASSEMBLY

Drive Shaft Assembly (14, 43, 44)

Left Pawl Assembly (16, 39, 40, 41)

Right Pawl Assembly (16, 40, 41, 42)

For parts inquiries, call 1-800-338-3220